


PARTS LIST

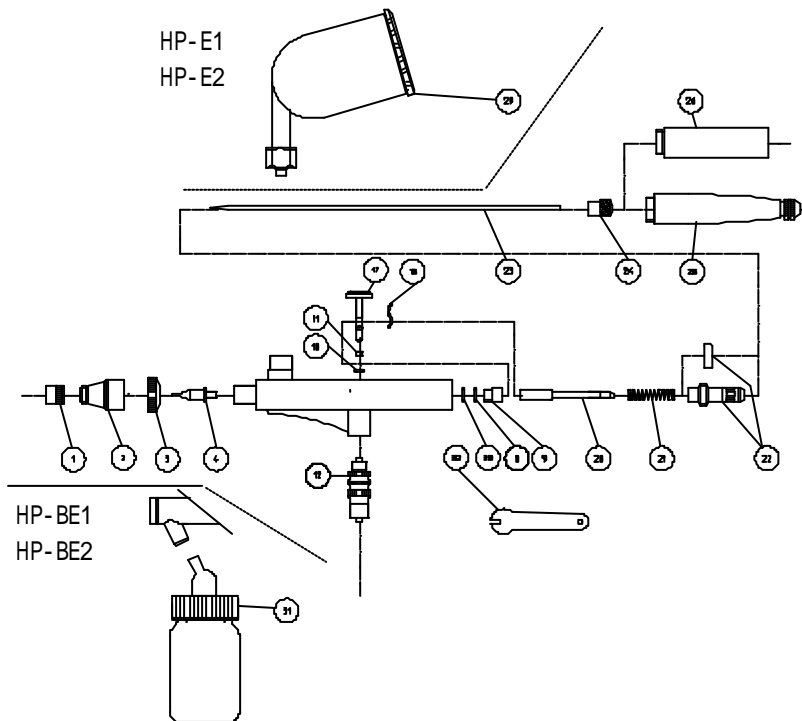

	Parts name	E1	E2	BE1	BE2
1	Needle Cap				
2	Nbzzle Cap				
3	Cap washer				
4	Nbzzle				
8	Needle packing				
9	Needle packing Screw				
10	Piston O ring				
11	Piston				
12	Air Valve Set				
17	Main Lever				
18	Auxiliary lever				
20	Needle Chucking				
21	Needle Spring				
22	Spring Guide (Spring adj screw)				
23	Needle				
24	Needle Chucking Nut				
25	Preset Cap Set				
26	Cap				
29	Cup Set				
32	Spanner				
31	Bottle set				
39	Needle seat				

- 1) marked parts are replacement parts.
- 2) marked parts are common parts.
- 3) marked parts are model specific parts.